

COVEO

RELIABILITY & SAFETY



Control Box 4020 – 20A

Technical Notice



 SIREM

Product specification

CONTROL BOX FOR COVEO POOL COVER MOTORISATIONS

4020 series – 20A

Change history		
Indice	Creation	Date
00	Evolution software (A partir de S30/2023) et hardware (A partir de S40/2023)	10/01/2022
01	Software evolution (4.0/4.0 version since S36/2024)	26/07/2023
02	Evolution Software (version 4.1/4.0 for s46) - Correction of duplicate errors	07/10/2024
03	Creation	05/11/2024
04	Software evolution (version 5.0/4.1 from 24/02/2025) : Polski” (Polish) added to languages.	24/02/2025
05	Reversal of the meaning of errors N°6 and N°7	05/03/2025
06	Layout revision and addition of the 4020 PLUS	02/09/2026



Tutoriels vidéo

Page	NT-5218-3 – CONTROL BOX FOR COVEO POOL COVER MOTORISATIONS	Révision :	06
2		Date :	02/09/2026

1. Safety instructions



Installation specialist electricians only

The installation, electrical connection and commissioning of the control unit must be carried out by a qualified electrical professional, in accordance with the standards applicable at the installation site (NF C 15-100, NF EN 60335-1, NF P90-308).

Any work carried out by an unqualified person may result in a risk of electric shock or damage to the equipment.

The unit must be connected to:

- a residual current differential device (30mA)
- an all-pole circuit breaker with a point gap of 3 mm.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by persons lacking experience or knowledge, unless they have been given supervision or prior instructions concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.




Before operating the cover, the person carrying out the operation must ensure that there are no swimmers, animals or obstacles on or beneath the cover and must always keep the pool in view during opening or closing operations.

Never operate the cover without a direct view of the pool.

It is essential to open or close the cover **completely** and never leave it in the intermediate position.

Always check that the pool's water level remains constant and in compliance with the manufacturer's recommendations.

Any use that does not comply with this document may result in the warranty claim being rejected.

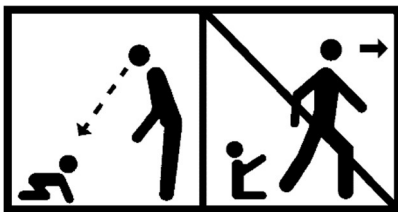

AVERTISSEMENT:

A swimming pool can pose a serious danger to children. Drowning can occur very quickly. Children near a swimming pool require your constant vigilance and active supervision, even if they know how to swim.

The physical presence of a responsible adult is essential whenever the pool is open.

2. Contents

1.	Safety instructions.....	3
2.	Contents.....	4
3.	Technical data	5
3.1.	Unit specifications	5
3.2.	Description	7
3.2.1.	Composition	7
3.2.2.	COMPATIBLE MOTORS	7
3.2.3.	Space requirements.....	8
3.3.	Installation wiring diagrams.....	9
3.3.1.	Wiring a 230vac pump contactor.....	9
3.3.2.	Wiring a 24vdc pump contactor.....	9
3.3.3.	TERMINAL BLOCK FROM OCTOBER 2023	10
4.	Installation	11
4.1.	Wiring the motor	12
4.1.1.	Length of cables	12
4.1.2.	COVEO MOTOR CONNECTION	14
4.2.	KEY SWITCH CONNECTION	15
4.3.	WIRING THE ELECTROLYSER OR WATER TREATMENT DEVICE.....	15
4.4.	WIRING THE PUMP	15
5.	Accessories.....	15
6.	Programming	16
6.1.	Settings menu: Configuring the system with the unit.....	17
6.1.1.	Basic settings: sensor and motor type	17
6.1.2.	Advance settings: speed, control, language	17
6.2.	Manual mode	18
6.3.	Initialisation	20
6.3.1.	PREREQUISITE: CHECK THE WIRING.....	20
6.3.2.	DELETING AN INITIALISATION	20
6.3.3.	Initialisation.....	20
6.4.	-Faults	22
6.5.	Normal screen	23
6.6.	closing speed setting	23
6.7.	Nominal values for slow speeds, time and maximum permissible current To be reviewed	23
6.8.	"Slow mode"	24
6.9.	Electrolyser contacts.....	25
6.10.	Pump contacts	25
7.	Menu structure	26
8.	Dimensions & weight	27
9.	Product marking.....	28
10.	Declarations of conformity	29

3. Technical data

3.1. Unit specifications

Regulatory requirements	
Certification	CE
Compliance with European directives (motor and control box assembly)	Low Voltage Directive 2014/35/EU Machinery Directive 2006/42/EC EMC Directive 2014/30/EU RoHS Directive 2011/65/EU and 2015/863/EU
Resistance to environmental disturbances Immunity to electrical fast transients/bursts Surge immunity	EN 61000-4-4 level 3 tests EN 61000-4-5 level 3 tests

Power supply	
Input voltage	230Vac
Input voltage tolerance	±10%. Min: 207Vac, Max: 253 Vac.
Standby power consumption	8W, 80mA@230Vac.
Maximum power consumption	720W, 3,8A@230Vac. (20A motor), 360W, 1.6A@230Vac (10A motor)
Connection	Removable terminals, max. cross-section 2,5mm ² , tightening torque 0,6Nm, screwdriver 3,5x0,6mm
Earthing	Mandatory for the safety of persons and equipment
Protection	Fuse ø5x20, T5H250V (5A time-delay fuse)
Display	Colour resistive touchscreen 320x240 LCD TFT 2,5"

Motor power supply	
Motor voltage	15 Vdc min, 30 Vdc max
Maximum current	10A (401X control box) or 20A (402X control box)
Sensor board voltage	18Vdc – 30Vdc
Protection	ATO 25A fuse
Connection	Removable terminal block, max. cross-section 16mm ² , tightening torque 1,5 Nm

Inputs	
Key switch / Remote control receiver	2 inputs (opening and closing). Common: 24Vdc. (Imax available: 100mA, protected by a thermal fuse)
Contact type for key switch or remote control receiver	Dry contacts
Voltage	24Vdc – 26Vdc
Electronics current consumption	8mA per input
Connection	Removable terminal block, max. cross-section 16mm ² , tightening torque 1,5 Nm

Outputs: 2 status relays	
Bistable NO/NC relay: dry contacts "pool closed" for controlling the electrolyser	Switching capacity 1A@50Vdc
NO/NC relay: dry contacts "Motor running" for controlling the pump	Switching capacity 3A@250Vac, 3A@30Vdc
Connection	Removable terminal, max. cross-section 2,5mm ² , tightening torque 0,6Nm, screwdriver 3,5x0,6mm
Electronics current consumption	8mA per input

Communication	
Type	Slave
Supply voltage	12Vdc (protected against short circuits by a thermal fuse)
Protocol	Modbus, see SIREM document NT-5114-2
Connection	Removable terminal, max. cross-section 1,3 mm ² , max. tightening torque 0,2 Nm, screwdriver 2,5x0,4mm

Mechanical	
Protection rating (according to EN 60529)	IP54 Installed indoors, protected from the weather (no sun, no rain)
Control box impact resistance	IK08
Operating storage temperature.	-5°C to +40°C -10°C --> +60°C
Humidity	95% max., non-condensing

4020 PLUS


The standard 4020 control unit is compatible with drive systems whose shaft is submerged to a **maximum depth of 1.2m**.

Beyond this depth, the 4020 PLUS control unit is recommended: please contact SIREM.

For an IM600 drive system, only the use of the 4020 PLUS control unit is recommended.

3.2. Description

3.2.1. Composition

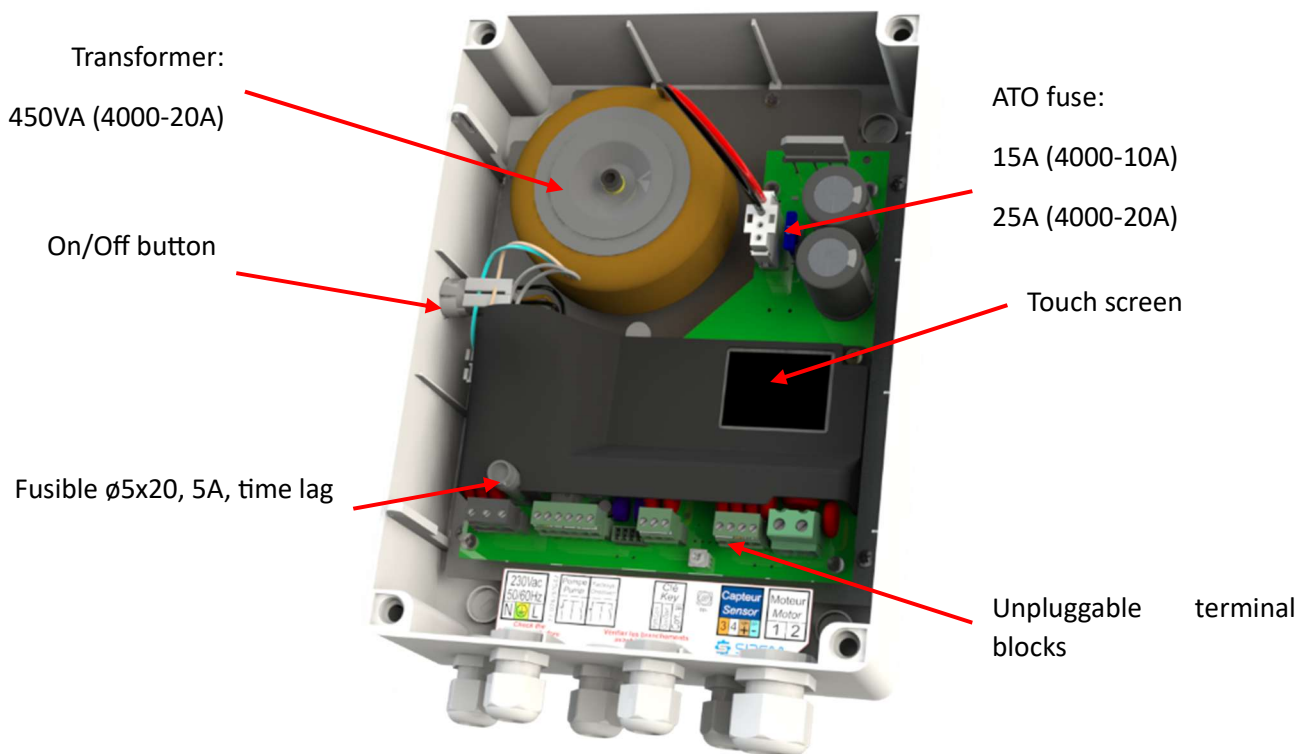

4020 PLUS

The 4020 PLUS incorporates an additional electronic circuit board with braking resistors to dissipate the energy fed back by the motors.




3.2.2. COMPATIBLE MOTORS

Motor type	4020	4020 PLUS
MIS	Yes	Yes
Coveo 120Nm	Yes	Yes
Coveo 200Nm	Yes	Yes
Coveo 300Nm	Yes	Yes
Coveo 300+	Yes	Yes
Coveo 600Nm	No	Yes


The motor type settings can be accessed from the unit's interface and: Settings > Motorisation type

3.2.3. Space requirements

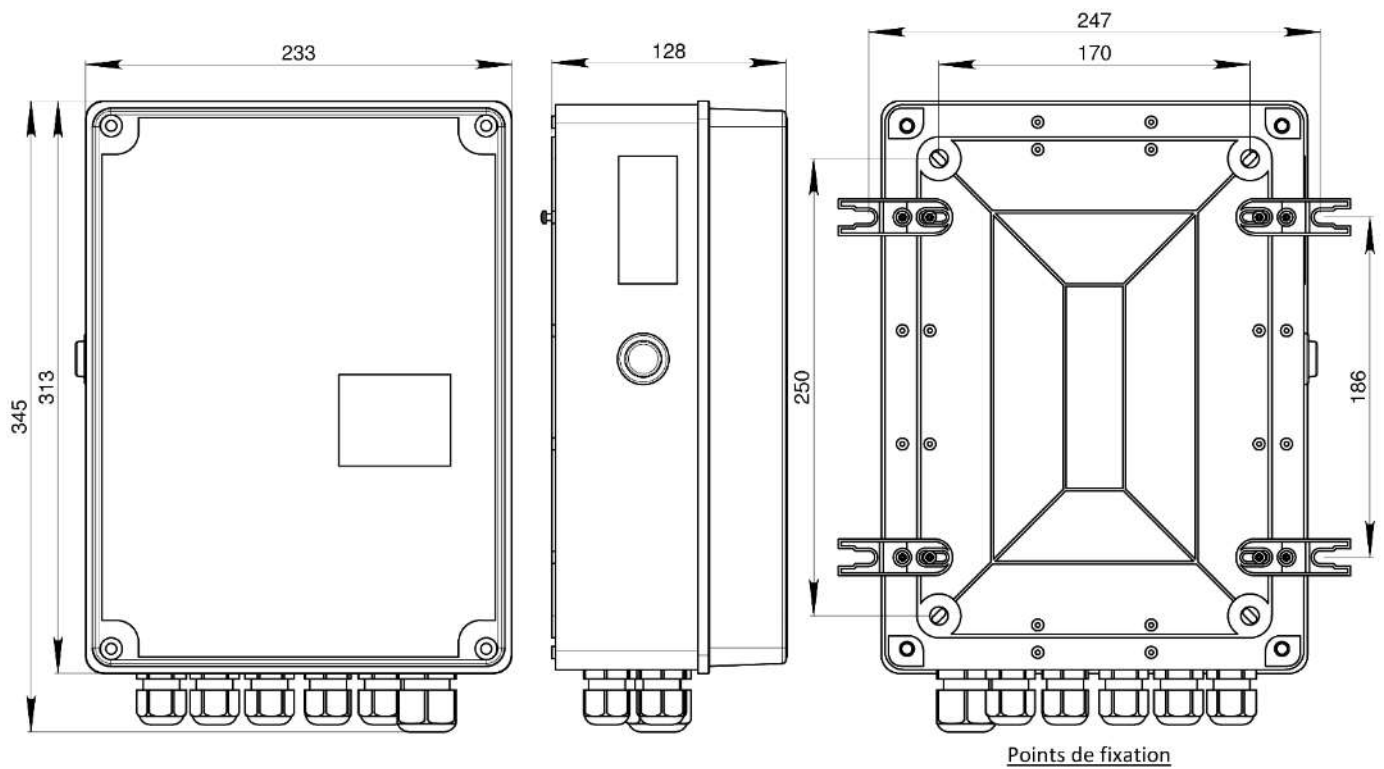


3.3. Installation wiring diagrams

3.3.1. Wiring a 230vac pump contactor

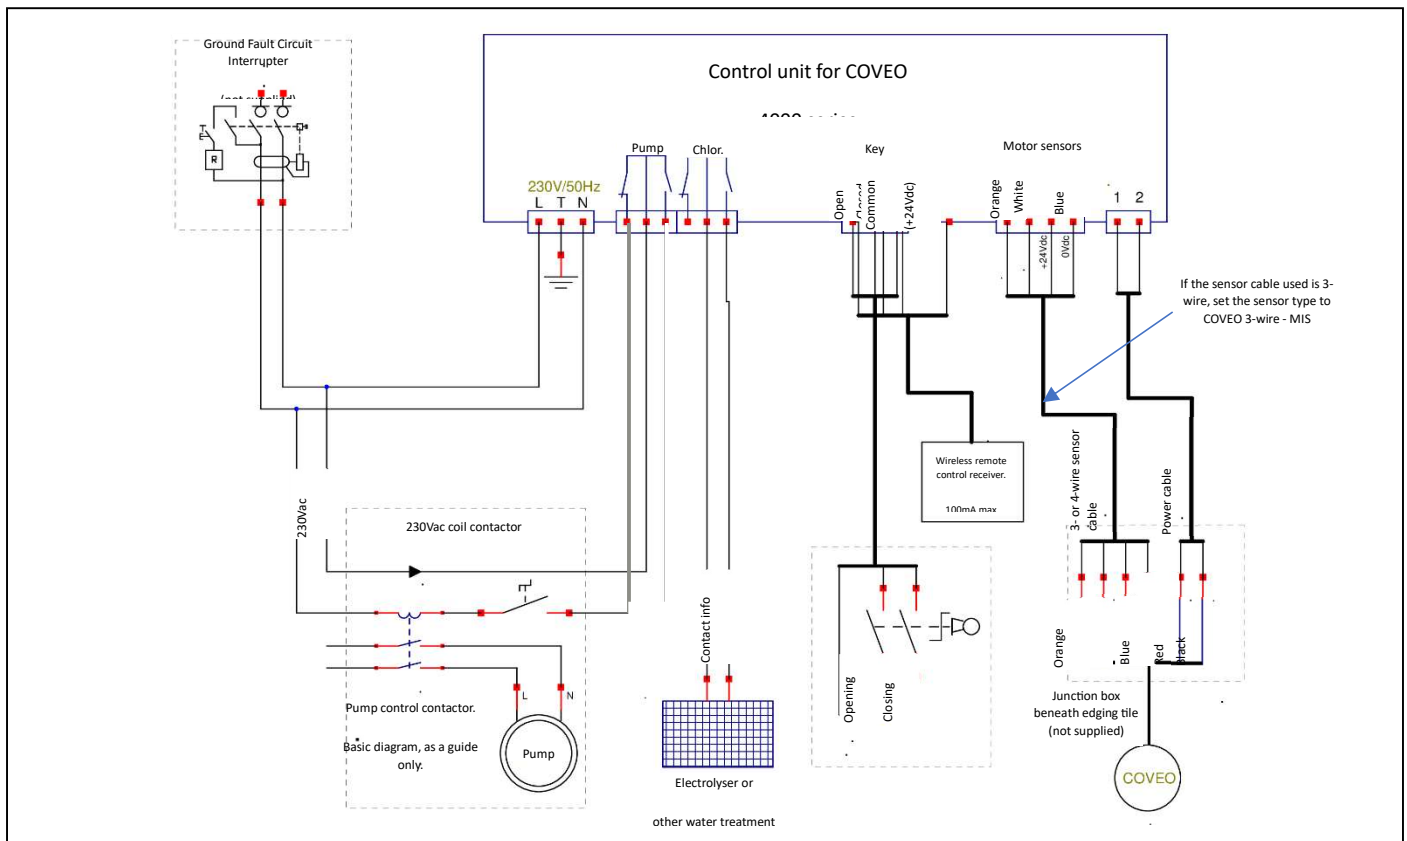


3.3.2. Wiring a 24vdc pump contactor

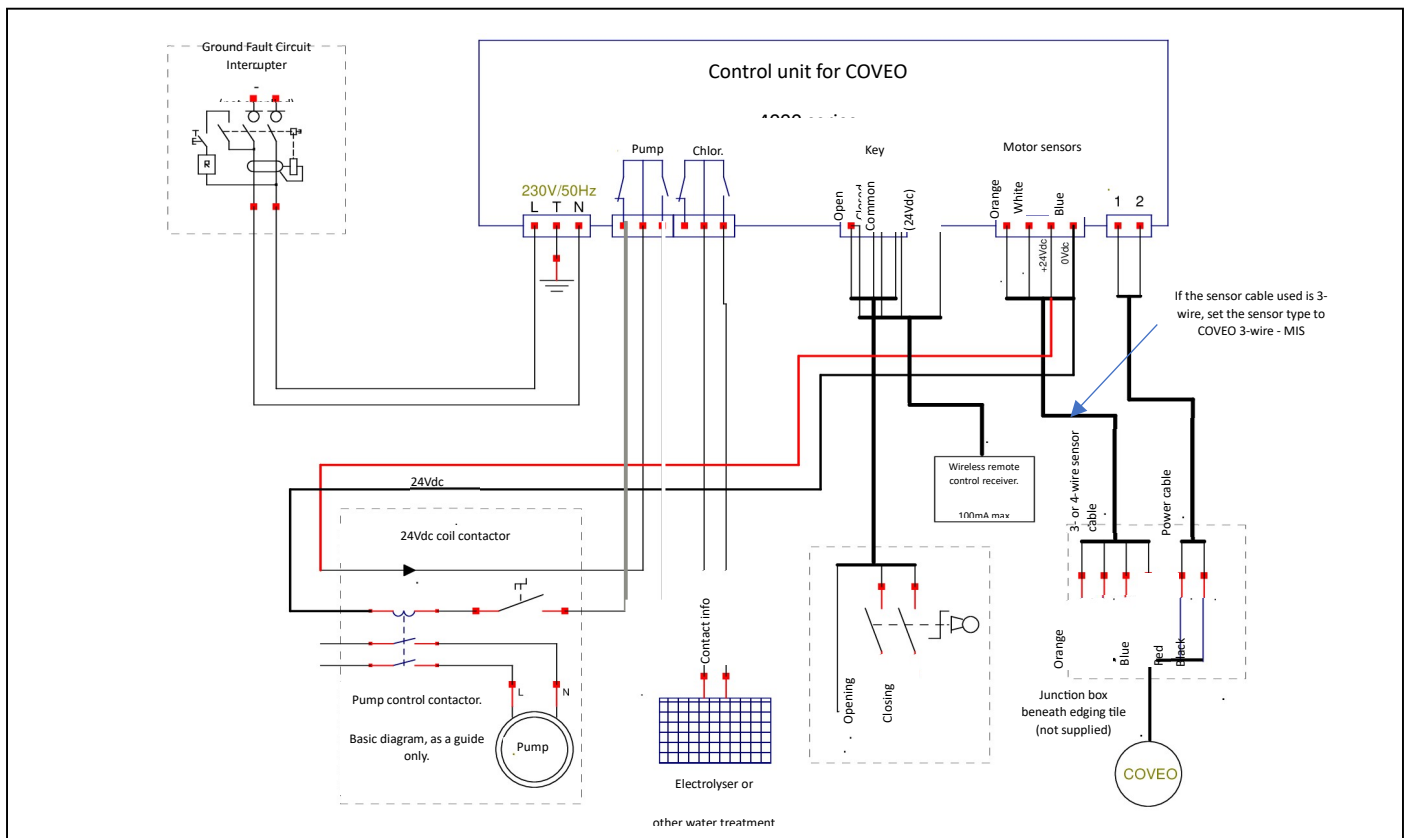


Only personnel with adequate electrical clearance are permitted to work on an electrical installation.

3.3.3. TERMINAL BLOCK FROM OCTOBER 2023

From October 2023, wireless control units (Bluetooth or RF) will have a dedicated terminal block, with 4 new terminals added between the keypad terminal block and the sensor terminal block. As a result, the box will no longer have to be connected to the same terminals as the key box.

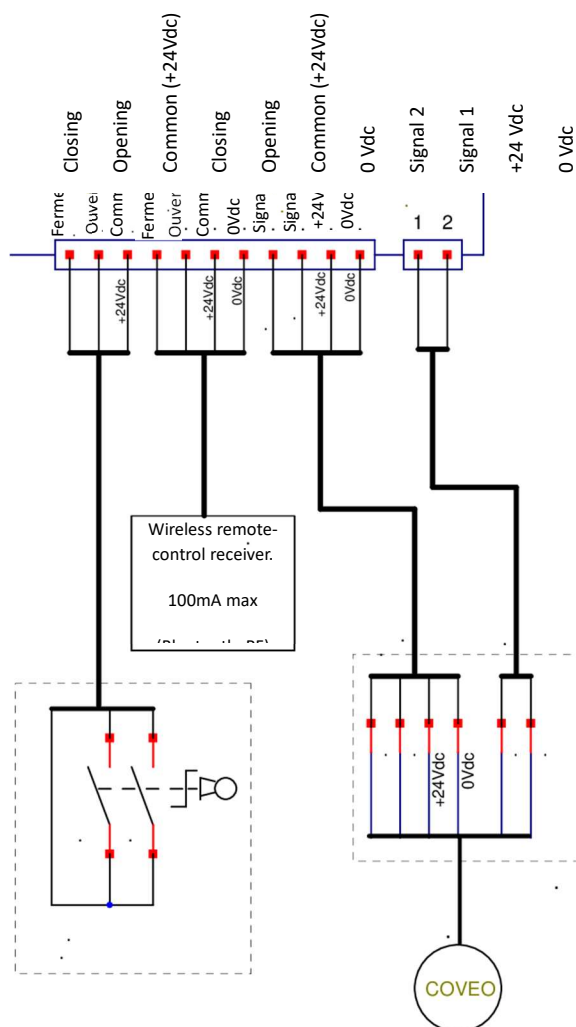

4. Installation

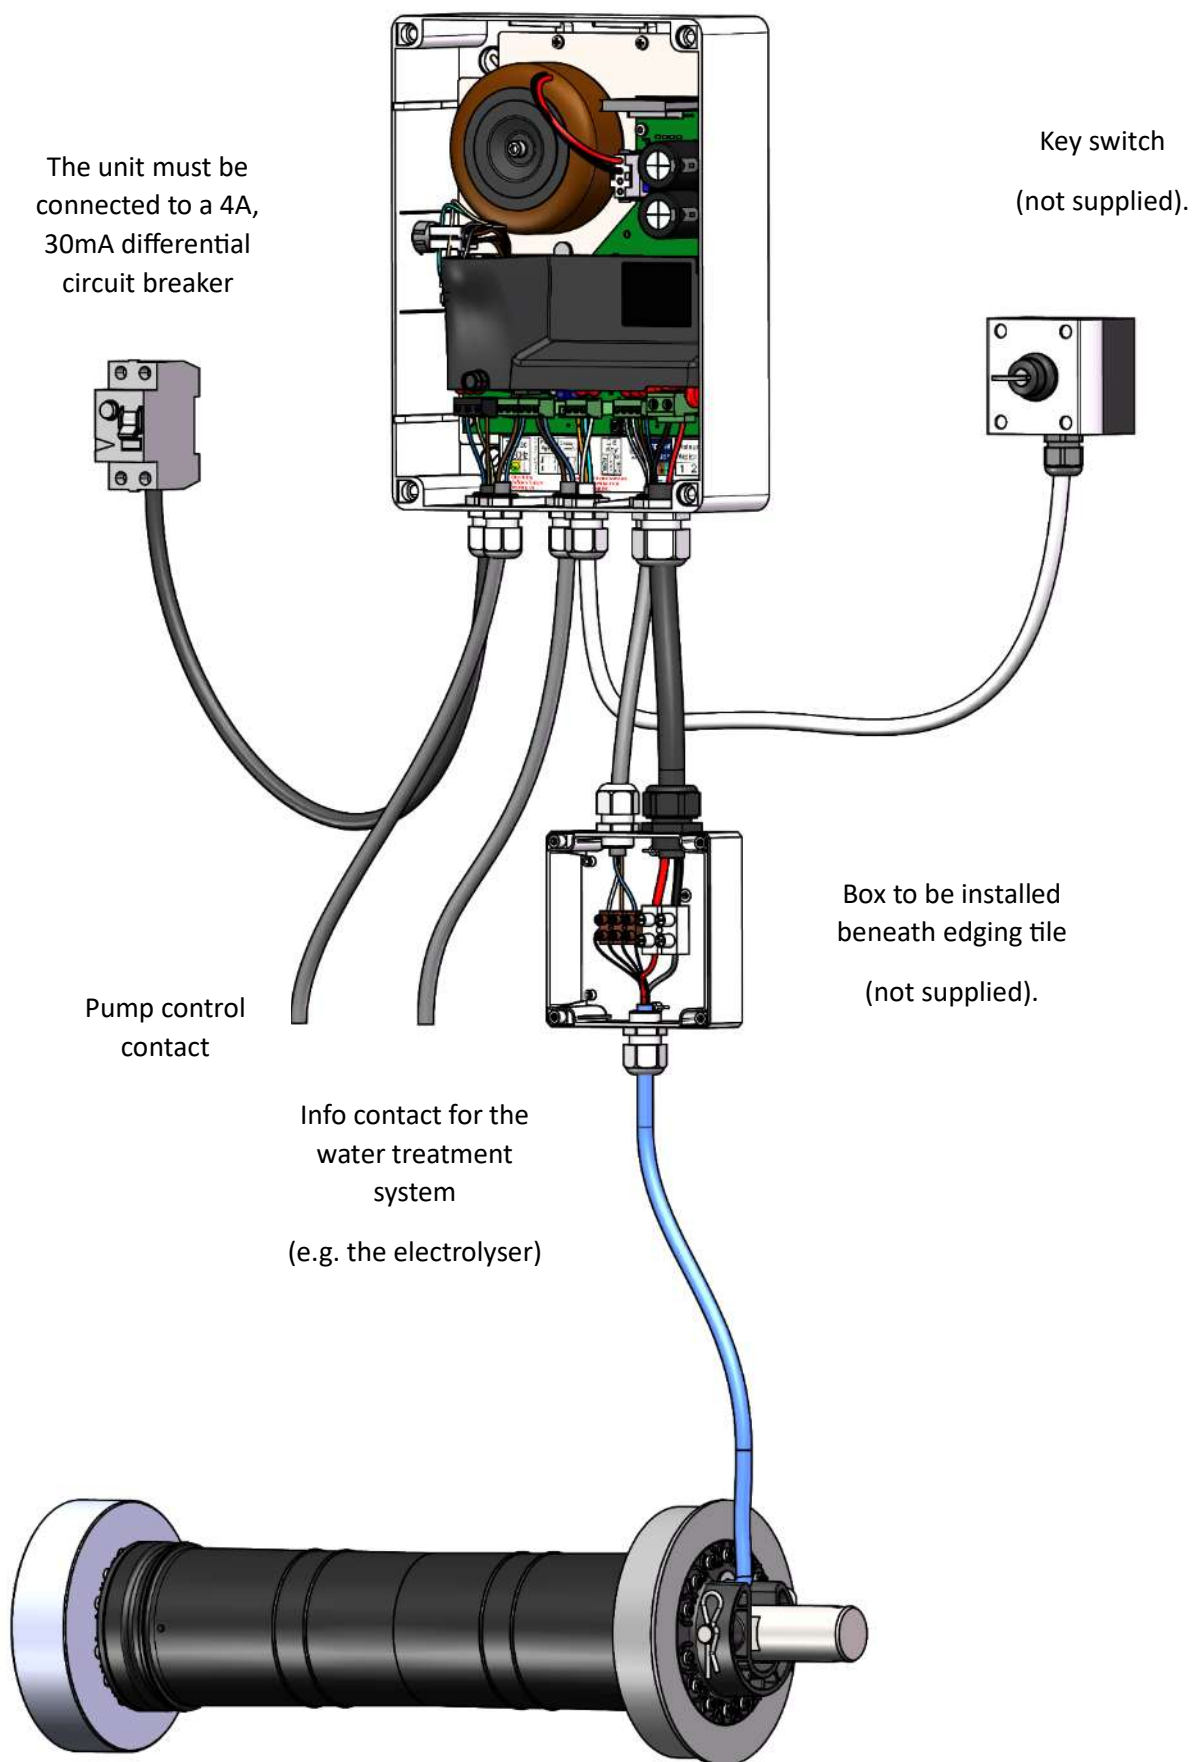

107821

4.1. Wiring the motor

The unit is usually connected to the motor by two cables: a motor cable and a cable for sensor signals.

The connection between these cables and the motor cable is made in a connection box installed beneath the edging tile. The seal will be made by filling the connection box with gel (gel not supplied).

4.1.1. *Length of cables*

4.1.1.1. *Motor cable*

To guarantee sufficient speed for the motor, the voltage drop at full charge between the power supply box and the motor will not exceed 2 Volts. The motor power supply cable conductor cross-section will respect the cross-section recommendations according to the distance between the control box and the motor:

Coveo 120 Nm: (7A max)

Motor control box distance	2m<L<=10 m	10m<L<= 20 m	20m<L<= 30 m	30m<L<= 50 m
Recommended cross-section	2.5 mm ²	2.5 mm ²	4 mm ²	6 mm ²

MIS (old generation), Coveo 200Nm and 300 Nm: (10A max)

Motor control box distance	2m<L<=10 m	10m<L<= 20 m	20m<L<= 30 m	30m<L<= 50 m
Recommended cross-section	2.5 mm ²	4 mm ²	6 mm ²	10 mm ²

Coveo 300+/ 60 Nm: (20A max)

Motor control box distance	2m<L<=10 m	10m<L<= 20 m	20m<L<= 30 m	30m<L<= 50 m
Recommended cross-section	4 mm ²	6 mm ²	10 mm ²	16 mm ²

Class 5 copper linear resistance at 20°C: around 19 ohm.mm²/km

These cross-sections are indicated in the case of maximum product consumption. They may be reduced if the consumption is lower (consult SIREM).

4.1.1.2. *COVEO sensor cable*

Cable used to connect COVEO motor sensors (brown/blue/white/orange wires) to the unit.

It is preferable to use a shielded cable in order to protect the motorisation from atmospheric surges. This protection will only be effective if the shielding is connected to the corresponding terminal (Type LiYY).

The cross-section of this cable's wires will be at least 0.75mm².

Max. length: 50m.

Installing a 4-wire cable is recommended.

Because the analysis of the two signals by the unit provides greater counting accuracy.

4.1.2. COVEO MOTOR CONNECTION


The sensor cable consists of 4 wires:
Set the sensor type in the Menu
"BASIC SETTINGS"
"SENSOR TYPE"
"COVEO with 4 wires"

Terminal to connect possible shielding or a shielding continuity drain wire (0Vdc)

Do not reverse the connection of the orange and white wires after initialisation.

Recommended sensor cable: shielded 4-wire cable. Minimum cross-section 0.75 mm², max. length 50 m

Cross-section of the motor cable to be adapted to the length (see 4.1.1.1). Max. length

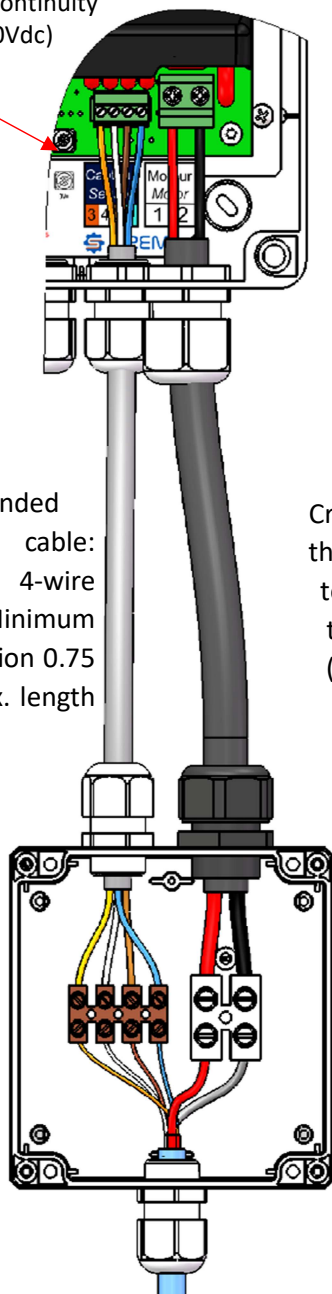

The sensor cable consists of 3 wires:
Set the sensor type in the Menu
"BASIC SETTINGS"
"SENSOR TYPE"
"COVEO with 3 wires or MIS"

Terminal to connect possible shielding or a shielding continuity drain wire (0Vdc)

In the "COVEO with 3 wires or MIS" position, only terminal 4 is connected to the orange or white wire.



Shielded 3-wire sensor cable. Minimum cross-section 0.75 mm², max. length 50 m

Cross-section of the motor cable to be adapted to the length (see 4.1.1.1). Max. length


Junction box to be installed beneath edging tile (not supplied).

To be filled with IP68 insulating gel

Under no circumstances should the unused wire touch the other wires.

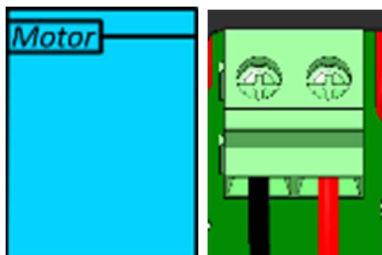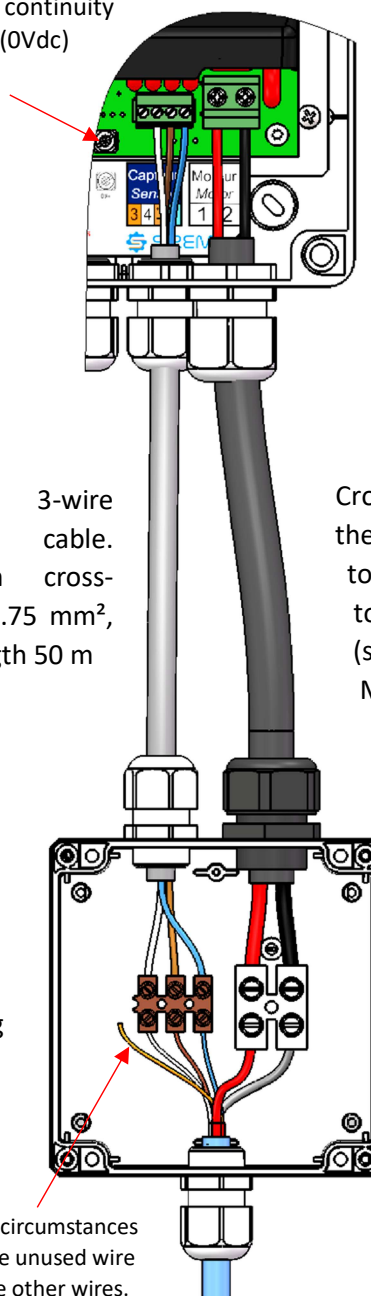

The red and black wires of the motor are connected to the terminal blocks according to the position of the motor in the pool

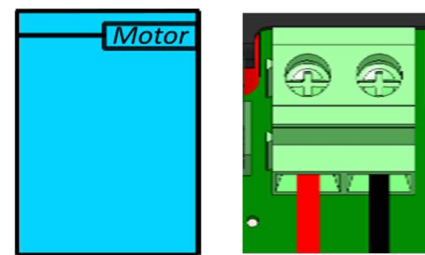


4.2. KEY SWITCH CONNECTION

Connect the opening and closing contacts to the corresponding terminals.

Common = 24Vdc.

Check this connection during the first stage

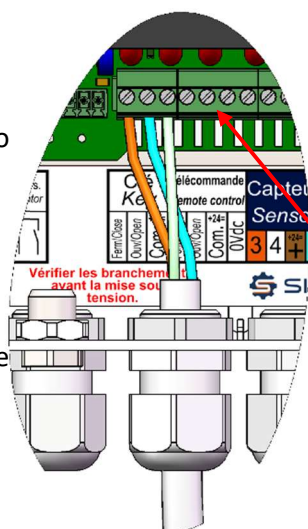

Terminal block for connecting a Bluetooth or RF receiver.

Power supply 24Vdc - 100mA max.
Common to be brought back on opening and closing: +24Vdc.

Check this connection during the first stage of programming.

4.3. WIRING THE ELECTROLYSER OR WATER TREATMENT DEVICE

If the water treatment unit has an input to inform it of the status of the swimming pool (closed or open), it is possible to connect a contact from the electrolyser terminal to it.

This connection will be via two wires, one of which will be the common wire from the treatment device, and the other will be the signal.

4.4. WIRING THE PUMP

The unit has a contact that changes status when the COVEO motorisation is in motion. This information can be used to turn off the filter pump.

Under no circumstances can the contact switch off the pump directly. It can only be used to control the pump's contactor, in series with the On/Off switch if this is present.

See wiring diagram 3.3

5. Accessories

The unit comes with:

- Two bags of accessories including:
 - 4 ø8x40 dowels
 - 4 ø5.5x50 screws
 - 4 mounting tabs with mounting screws on the unit
 - 7 unpluggable terminals for the unit's various terminals
 - 1 ATO fuse
 - A fast-blow fuse
- A drilling template
- A quick start guide in a cover


6. Programming




In general, it is not necessary to change the settings. If this is necessary, the touch screen allows access to all functional settings.

Default: 300+/600 motor and 4-wire sensor.

The screen goes into standby after 10 minutes. To get out of standby, press it or operate the key.

Information: The screens shown in this document may differ from reality and may not take software updates into account.


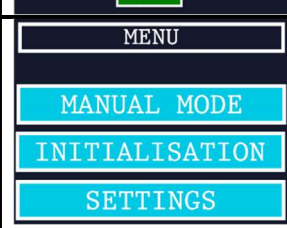
	Start-up screen that appears when the power is turned on. Self-test for the unit's main functions. 10 A indicates the max. current of the unit. If the Self-test is negative, then a warning screen appears.
	After the start-up screen, the unit shows the status of the system. <u>Partial</u>: neither open/closed or position unknown when the system is not initialised. <u>Not initialised</u>: the limit switches are not set. The initialisation needs to be done. <u>Not calibrated</u>: the calibration requires 5 complete opening/closing cycles. After a few seconds, the following screen appears.
	To change the language. 8 languages available: French (default), English, Spanish, German, Italian, Dutch, Portuguese, Polish. This screen disappears after 4s.
	Warning screen. Only appears if the cover has not been initialised.
	<u>Manual mode</u>: to manipulate the cover at low speed <u>Initialisation</u>: allows the adjustment of the limit switches <u>Settings</u>: settings for the cover. This screen is displayed for 4s before switching to the next screen if initialisation is done. This screen does not appear after power up if the initialisation has been done. This screen remains displayed if the initialisation needs to be done.
	Normal screen. Standby after 10 min.: the screen turns off if the initialisation has been done.
	INFOS screens. These screens display the parameters stored in the box. The Back button returns to the Normal screen. The Errors button returns you to the HISTORY of errors encountered by the unit.

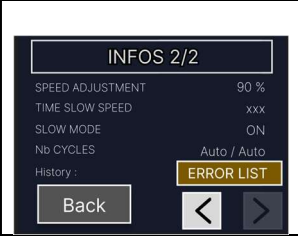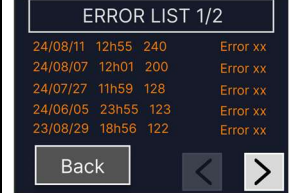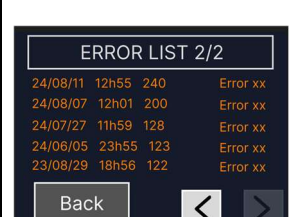	
	HISTORY screens. These screens list and date errors encountered by the box. Storage capacity is 10 errors. If a new error is encountered once the memory is full, the oldest is deleted.
	Lines are given in the following format: YY/MM/DD HH:MIN NB CYCLES ERROR XX The table in section 5.4 Faults allows you to identify the error by its number.


6.1. Settings menu: Configuring the system with the unit




	Basic settings: • The sensor type • The motor type	Advanced settings: • Start/end speed, see. ch. 5.6 • Pump delay • Control type • Language.
---	--	--

6.1.1. Basic settings: sensor and motor type

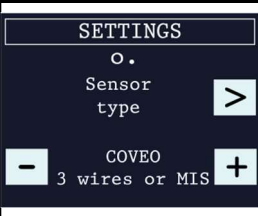
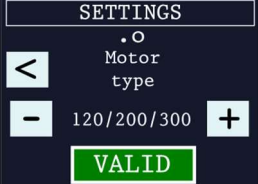
	Setting the sensor type: 2 choices: 3-wire sensor or 4-wire sensor (see 4.1), default position. Press > to go to the next menu Press - or + to change the value
	Setting the type of motor installed: 2 choices: 120/200/300 (10A max. motors) or 300+/600 (default position for 16A max. motors). Press VALIDER to return to the menu

6.1.2. Advance settings: speed, control, language

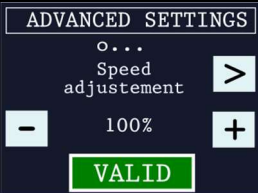	Speed adjustment: The speed can be reduced between 60% and 100% Press - or + to change the value.
--	--

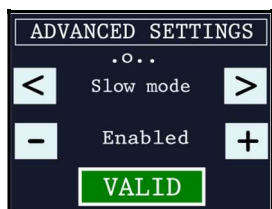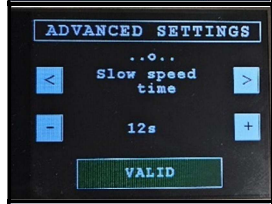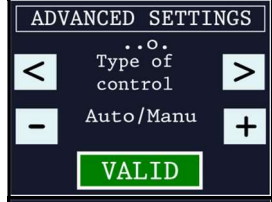	Slow mode: Enable/disable When the Slow mode is on, the speed slows down at the end of opening, see ch. 6.8
	The duration of the first slow speed at the start of pool closure is adjustable: from 0s to 30s, default 12s.
	Type of control of opening and closing movements: - Auto/Manu; Manu/Manu; Auto/Auto; Man start of Closing then Auto/Auto Only auto/manu and manu/manu movements are allowed in France.
	Screen like the start screen, to change the language: 8 languages available: Français (default), English, Español, Deutsch, Italiano, Nederlands, Portugues, Polski.

6.2. Manual mode

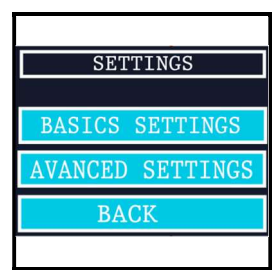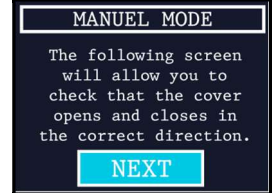	Manual mode allows you to: - Bring the cover to the closed position, prior to initialisation. - o Check the correct wiring: Of the key: Activating “open” opens the pool cover, activating “close” action closes the pool cover. - o No sensor error. If a sensor error occurs during the movement, a message is displayed, but movement is still possible. Correct the fault and restart.
	If the initialisation has not been done: Manual mode can be used to check that the wiring is correct.
	To check the correct wiring of: - The key switch: activating “open” opens the pool cover, activating “close” action closes the pool cover. If the reverse is the case, reverse the connection of the motor power supply wires connected to terminals 1 and 2. - Sensor: the sensor error should not appear
	If the initialisation has been done, this mode allows the cover to be moved beyond the limit switches. From the closed position, do not unroll more than two full turn of the shaft. There is a risk of losing the limit switches and having to re-initialise.



To exit this mode, click OK. It will not be necessary to perform an initialisation


From the closed position, do not unroll more than two full turn of the shaft. There is a risk of losing the limit switches and having to re-initialise.

6.3. Initialisation

6.3.1. PREREQUISITE: CHECK THE WIRING

Switch to manual mode. If initialisation has already been performed ('initialised' message on power-up), it must be deleted (see next chapter).

- 1st step: Turn the key to open, the display should read Opening:

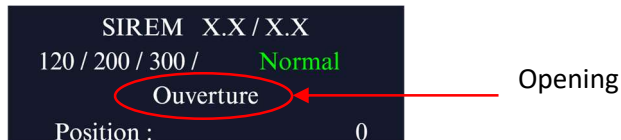

If this is not the case, reverse the connection of the key control open and close wires. Carry out the same check on the remote control. If a sensor error occurs (red screen), check the sensor wiring.

If the connection is correct, proceed to step 2.

- 2nd step: check that the motor is connected. To do this, turn the key to open and the pool should open. If this is not the case, reverse the wires at the motor terminal block.
- 3rd step: close the pool by turning the key to the close position. If a problem occurs, go back to step 1.

6.3.2. DELETING AN INITIALISATION

To delete saved limit switches:

- MENU → INITIALISATION. Click **OUI**
- Do not turn the key or tamper with the engine.
- Confirm by clicking on **VALIDER**

6.3.3. Initialisation

The screenshot shows a dark blue screen with a 'MENU' title at the top. Below it are three blue buttons with white text: 'MANUEL MODE', 'INITIALISATION', and 'SETTINGS'.	Press Initialisation to return to the initialisation mode.
The screenshot shows a dark blue screen with the title 'INITIALISATION'. Below it, the text 'Is the pool closed?' is displayed. At the bottom are two buttons: a green 'YES' button and a red 'NO' button.	Bring the cover to the open position by turning the key to the open position. Until the open position has been validated by pressing "yes", the cover can be moved in either direction without being able to go beyond the closed position.
The screenshot shows a dark blue screen with the title 'INITIALISATION'. Below it, the text 'Close the pool. When the closed position is reached, confirm' is displayed. At the bottom is a green 'CONFIRM' button.	If the pool cover is not closed, you are prompted to enter manual mode to close the pool cover.
The screenshot shows a dark blue screen with the title 'INITIALISATION'. Below it, the text 'OPEN the pool. When the OPEN position has been reached CONFIRM' is displayed. At the bottom, it shows 'Position: 0' and 'Current: 0.00'. At the very bottom is a green 'CONFIRM' button.	Bring the cover to the open position by turning the key to the open position. Until the open position has been validated by pressing "confirm", the cover can be moved in either direction without being able to go beyond the closed position.

	Confirmation of initialisation
	Normal screen at the end of initialisation.

The speed of the "MANUAL" and "INITIALISATION" modes is reduced by 50% and is not the opening or closing speed after initialisation.

The "speed settings" setting also affects the "MANUAL" and "INITIALISATION" mode speeds. They are decreased by the same ratio.

6.4. -Faults

N° Error	Error screen	Error detail
1	DEFAULT ELECTRONICS Scan the QR Code for online help Restart the control box	Faulty circuit board: The unit needs to be replaced
2	SENSOR ERROR Scan the QR code for online help Restart the control box	Sensor signals are not reaching the unit: → Check the wiring between the motor and the unit → Check the continuity of the motor output cable
3, 6, 7	OVERCURRENT Scan the QR Code for online help Restart the control box	Motor overload causing current consumption in excess of maximum allowed: - If 3: Exceeding the rating set in the box (10A or 20A) - If 6: Threshold set in CALIBRATION step exceeded during CLOSING. - If 7: Exceeding the threshold defined by the CALIBRATION step during OPENING → Remove the overload and restart the unit. If the fault reappears, it may be necessary to initialise the motor again to generate a new calibration. This fault does not stop the motor; two key strokes will clear the fault and restart the motor.
4	NO MOTOR VOLTAGE Scan the QR Code for online help Restart the control box	No motor voltage: → Check the ATO fuse and the transformer
8	POWER FAILURE Scan the QR Code for online help Restart the control box	Mains error. Disturbance present in the power supply grid (230Vac): The unit cannot operate with such disturbances. → Check the mains power supply If a power failure occurs when the cover is closing, this warning message indicates that an initialisation must be performed.
9	MOTOR DISCONNECTED Scan the QR Code for online help Restart the control box	Motor disconnected. The unit cannot start the motor, the motor is correctly supplied with power but no current can flow into the motor: It is likely that the motor is not connected: → check the wiring (power cable)


The QR code refers to <https://www.sirem.fr/control-box-4000/> which contains installation help and troubleshooting.



Video tutorial

6.5. Normal screen

Motor current in A

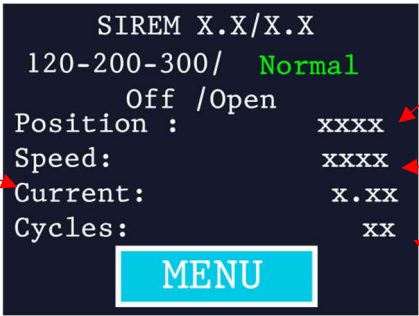

Position:


0 is the closed position

+xxxx open position (positive number), expressed in number of motor revolutions. Motor speed in revolutions per minute.

Number of cycles = number of times the pool cover has been opened and closed

1 cycle = 1 round trip.

6.6. closing speed setting

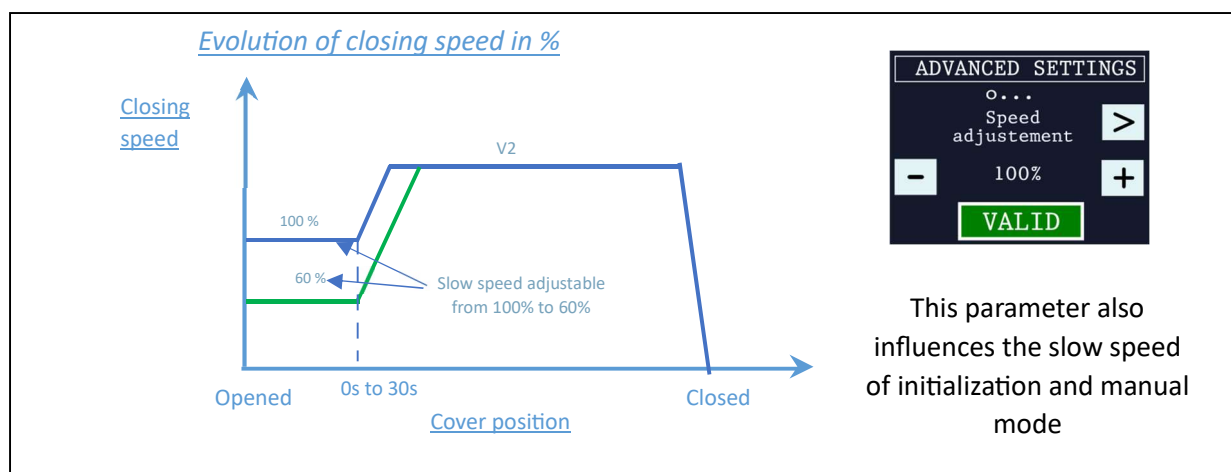

6.7. Nominal values for slow speeds, time and maximum permissible current To be reviewed

Tolerance: $\pm 15\%$.

120Nm – Slow speed during init./manual: 3000 rpm. IMAX 10A.			For manual mode without clearing stops	
N=885.8	Slow speed (motor)	Slow speed (shaft)	Min. No. Revs	Max. No. Revs
100%	3000 rpm	3.4 rpm	2.5 revs	32 revs
70%	2100 rpm	2.4 rpm		

200Nm- Speed during init./manual: 3000 rpm. IMAX 10A.			For manual mode without clearing stops	
N=630.3	Slow speed (motor)	Slow speed (shaft)	Min. No. Revs	Max. No. Revs
100%	3000 rpm	4.8 rpm	3.5 revs	32 revs
70%	2100 rpm	3.3 rpm		

300Nm- Speed during init./manual: 3000 rpm. IMAX 10A.			For manual mode without clearing stops	
N=1002.8	Slow speed (motor)	Slow speed (shaft)	Min. No. Revs	Max. No. Revs
100%	3000 rpm	3.0 rpm	2 revs	32 revs
70%	2100 rpm	2.1 rpm		


300+ - Speed during init./manual: 2400 rpm. IMAX 20A.			For manual mode without clearing stops	
N=516.4	Slow speed (motor)	Slow speed (shaft)	Min. No. Revs	Max. No. Revs
100%	2400 rpm	4.6 rpm	4.5 revs	32 revs
70%	1680 rpm	3.3 rpm		

600Nm- Speed during init./manual: 2400 rpm 3 rpm. IMAX 20A.			For manual mode without clearing stops	
N=1002.8	Slow speed (motor)	Slow speed (shaft)	Min. No. Revs	Max. No. Revs
100%	2400 rpm	2.4 rpm	2 revs	32 revs
70%	1680 rpm	1.7 rpm		

6.8. "Slow mode"

Select: MENU -> SETTINGS → ADVANCED SETTINGS -> AUTOFIX Mode > On.


Change in the opening speed with "Slow mode" set to "Enable".

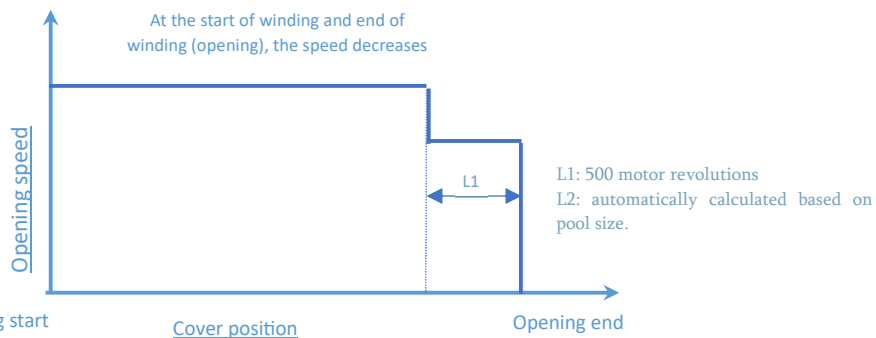

6.9. Electrolyser contacts


Position of the status changes of the electrolyser control contacts.

When manual mode is engaged, the contacts take the pool cover closed position (reduction of chlorine production)

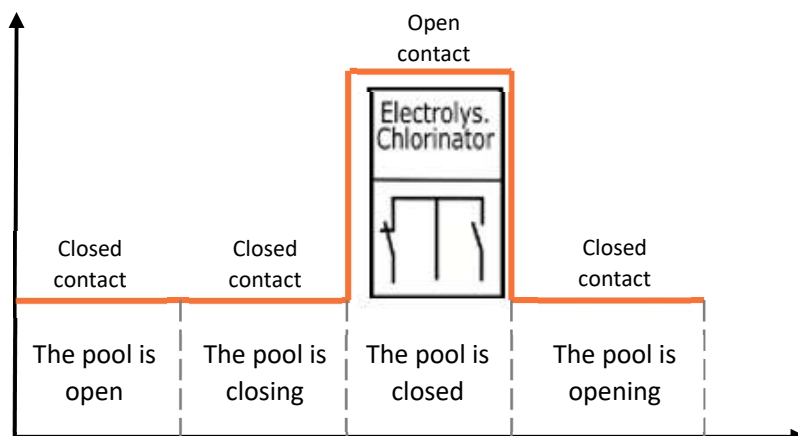


6.10. Pump contacts

The contacts change status when the motor is running. The contacts diagram on the sticker under the terminal block shows the status of the contacts when the motor is running.

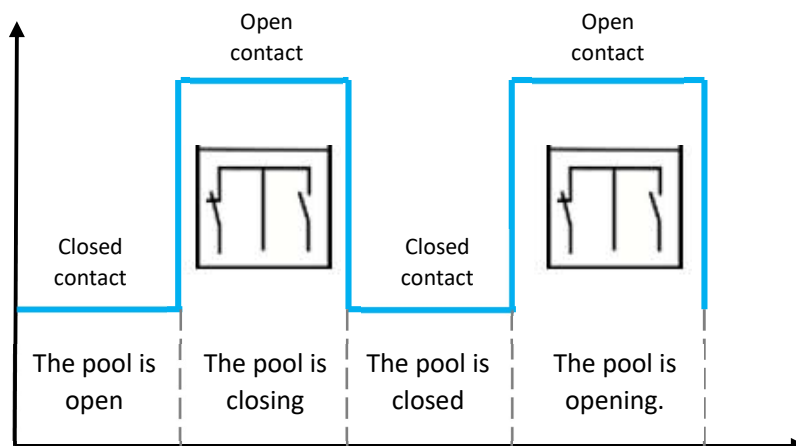

7. Menu structure

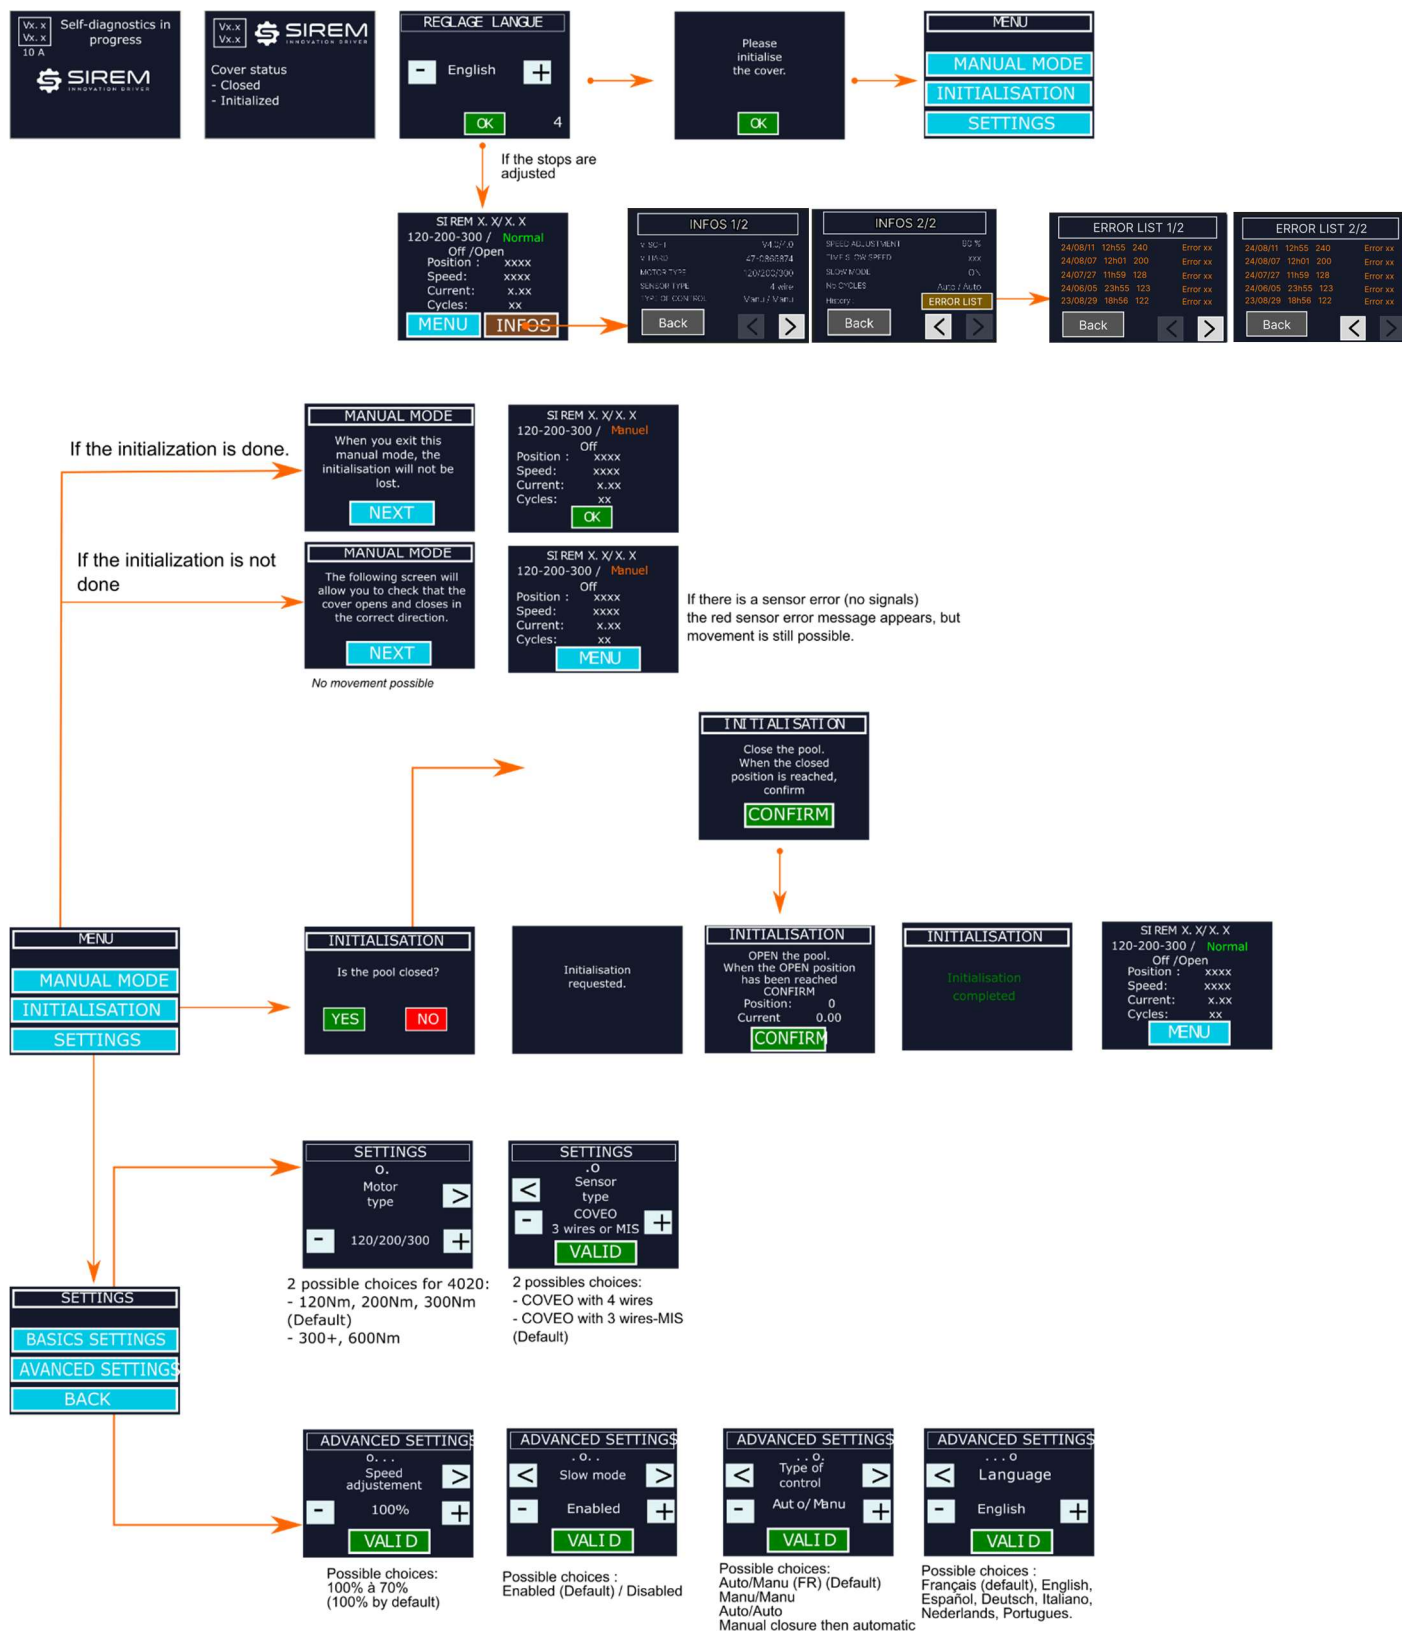


The screens below are simulated and may differ from those actually encountered.

"Control type" menu:



The faults screen:

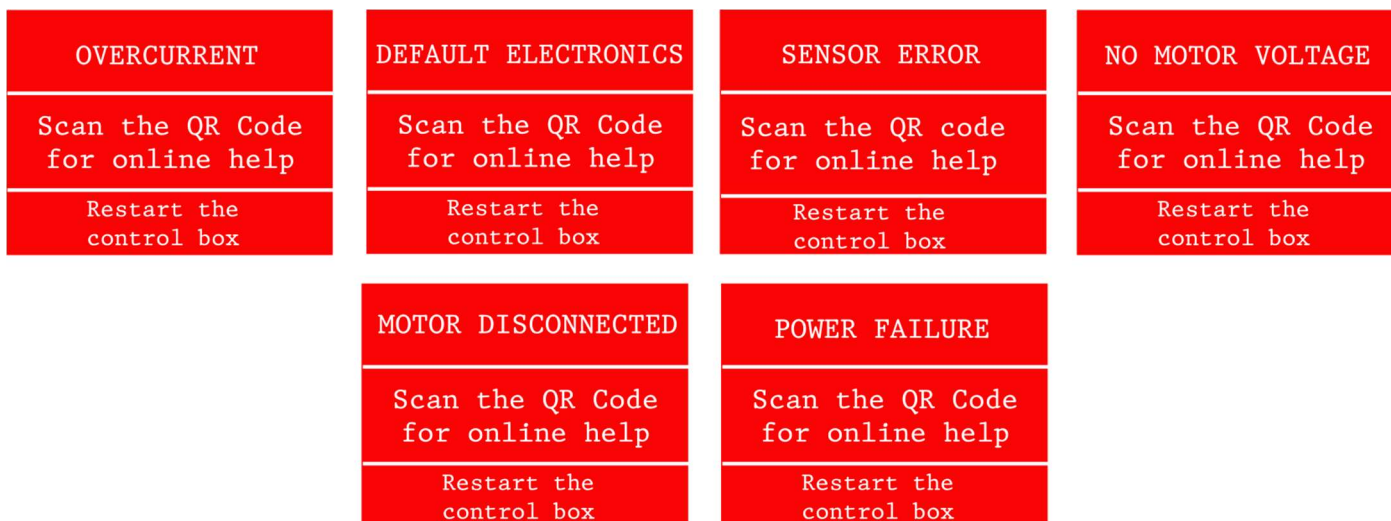

The QR code refers to the <https://www.sirem.fr/control-box-4000/> help page



Video tutorial

8. Dimensions & weight

- Packaging box size: 380mmx130mmx260mm. **(Packaging not intended for individual transport)**
- Weight of unit 4000-20A: 5.5 kg.

9. Product marking

Product identification label affixed to the box comprising 2 detachable self-adhesive parts with:

- Serial number in bar code form
- Date of manufacture
- OF No. (xxxxxx)

Coffret 4000 - 20A/24V - Control box 4000

Norme (Standard) : EN60335-1 Mai 2013
Tension d'entrée (Input voltage) : 210/250Vac, 50/60Hz
Imax entrée (Imax input) : 2A
Pmax : 720W - Pveille (Pstandby) : 8W; IPX4
OF : ss-aaaa XXXXXX



The barcodes are in code 128 format, they include the product code (05.0001.4xxx) followed by a unique number.

10. Declarations of conformity

	
UK CA UK – Declaration of conformity	
We, Localized at,	SIREM 3 Chemin du Pilon CS 40303 01700 - Saint-Maurice-de-Beynost FRANCE
Declare as the product manufacturer, and in our sole responsibility, that the following product, Control Box COVEO Part Number, 05000140XXXX	
Is in conformity with the requirement of the following regulations 2014/35/EU Low voltage Directive 2014/30/EU Electromagnetic compatibility Directive 2014/53/EU Radio equipment and repealing Directive Directive RoHS 2011/65/UE et 2015/863/UE	
The UK marking is realized on the traceability label of the product. Saint-Maurice-de-Beynost, the 24/02/2021.	
G. MALPHETTES Président	G. PEYTAVIN Directeur technique
	
T. PONSARD Responsable Qualité	
	
	
3 Chemin du Pilon - CS 40303 - Saint-Maurice-de-Beynost - FRANCE - Tél. : +33 (0)4 78 55 83 00 - Fax : +33(0)4 78 55 89 54 S.A.S au capital de 3 525 520 euros - RCS Bourg en Bresse - SIREN 351 138 169 - Code APE 2711Z - N°TVA FR 48 351 138 169	

EC – Declaration of conformity

Of the:

Control Box COVEO

As the manufacturer of the Product,
Localized at,**SIREM**3 Chemin du Pilon
CS 40303
01700 - Saint-Maurice-de-Beynost
FRANCE

We declare our equipment conform to the following directives:

2014/35/EU Low voltage Directive
2014/30/EU Electromagnetic compatibility Directive
2014/53/EU Radio equipment and repealing Directive
Directive **RoHS 2011/65/UE** et **2015/863/UE**

The CE marking is realized on the traceability label of the product.

Saint-Maurice-de-Beynost, the 24/02/2021.

G. MALPHETTES
PrésidentG. PEYTAVIN
Directeur techniqueT. PONSARD
Responsable Qualité