




# Diagnostics manual

-

## 40XX Control box Immersed COVEO

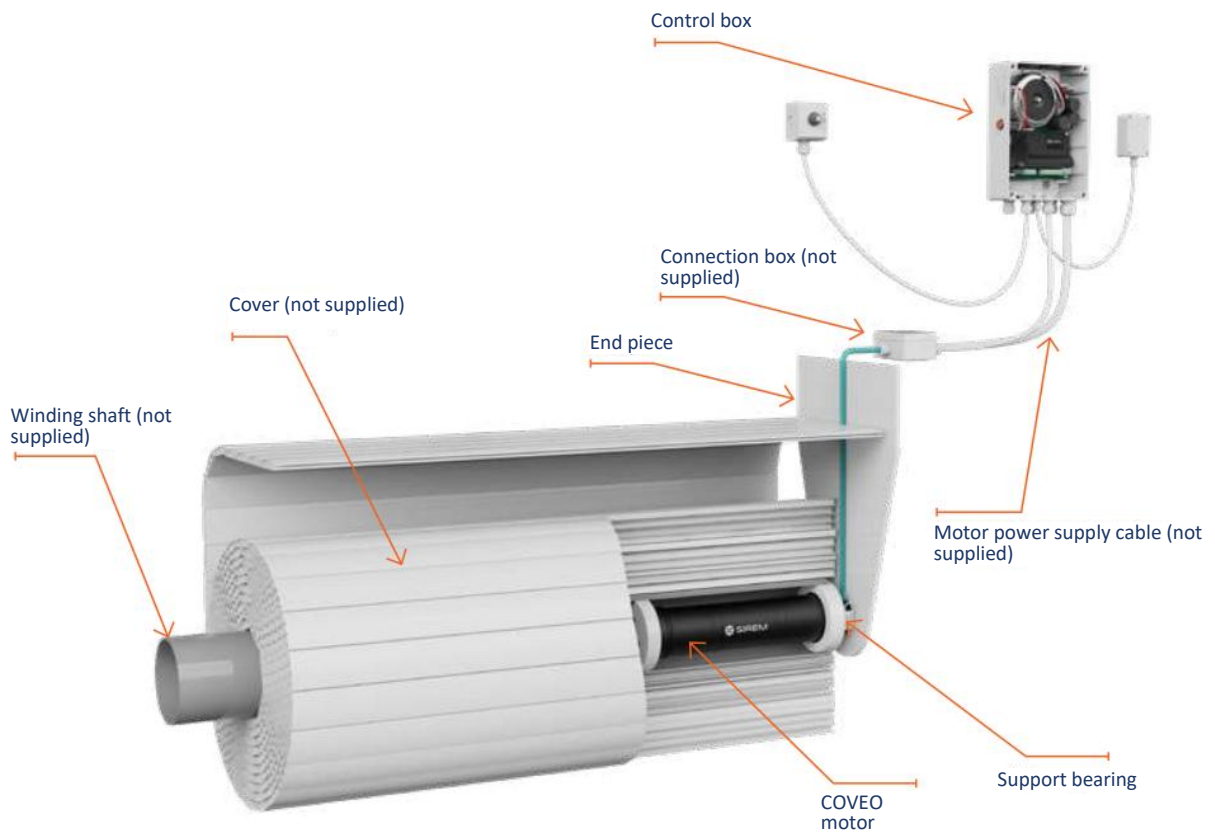

This document will help you to identify the origin of the problem and try to resolve it.  
If the problem persists after troubleshooting, we invite you to contact your motorised cover manufacturer.

	Title	<b>COVEO Diagnostics Manual - 4020</b>	Product	<b>COVEO</b>
	Cat.		Instruction	Rev.
			Property of SIREM	

### 2.3 White screen:



The control box is working but its User Interface is no longer working.

The appearance of a white screen is linked to a faulty screen or to the screen's connection to the electronic board.

If use of the control box is compromised by the appearance of a white screen, no on-site troubleshooting is possible.

**Return for possible refurbishment.**

**End of the diagnostics**

### 2.4 Communication fault:



Corrupted factory programme

Return to SIREM After Sales /service for reprogramming.

**End of the diagnostics**